


www.skyfactory.com •

toll free 1.866.759.3228

Revelation w/ EcoSlim Electrical Instructions (24PS HLG)

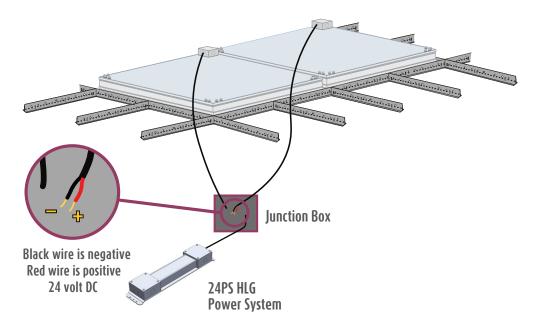

Installation Packet Includes:

Revelation w/ EcoSlim Electrical Instructions (24PS HLG) Installation specific wiring diagram (where applicable)

EcoPlus and EcoSlim Drawings and Charts (24PS HLG) Wiring Diagrams EL001199, EL001423, EL001447, EL001454, EL001455 Sky Factory 24PS HLG Power System Dimensions and Weights Wire Sizing Chart

For technical support at any time during the installation, please call us **toll free at 866-759-3228.** We want your installation to go as smoothly as possible. Thank you for choosing Sky Factory.

Revelation w/ EcoSlim electrical requirements:

ES24 Series = ES24, ES24M, ES24GES34 Series = ES34, ES34M, ES34GES46 Series = ES46, ES46M, ES46G ES26 Series = ES26, ES26M, ES26GES36 Series = ES36, ES36M, ES36G ES33 Series = ES33, ES33M, ES33GES44 Series = ES44, ES44M, ES44G

NOTE: For custom sizes, see installation specific wiring diagram included (where applicable)

All EcoSlim fixtures are 24V DC only.

EcoSlim fixtures must be mounted in dry locations only.

EcoSlim fixtures must be powered by provided UL, CSA and CE Compliant 24PS HLG Power System

Sky Factory 24PS HLG Power System:

Input (Typ): 90-305V, 47 - 63 Hz

Output: 24V DC

Maximum Watts (useable) per power system: 600 Watts

Available sizes: 40W, 60W, 80W, 100W, 120W, 150W, 185W, 240W, 320W, 480W, 600W

Power System aluminum enclosure

Mounted on baseplate with junction box on input and output ends

For mounting dimensions and weights, see "EcoPlus and EcoSlim Drawings and Charts (24PS HLG)"

For power system wire sizes, see "EcoPlus and EcoSlim Drawings and Charts (24PS HLG)".

Power system must have 2" clearance for air flow. A 4-6" (10-15cm) clearance must be kept when the adjacent device is a heat source

Power system must be mounted in dry locations. Wall mount recommended.

Power system is specified for Sky Factory EcoSlim and EcoPlus fixtures only.

For installations with multiple power systems, see

installation specific wiring diagram included (where applicable)

For EcoSlim with 24PS HLG Power System wiring diagrams, see

"EcoPlus and EcoSlim Drawings and Charts (24PS HLG)"

<u>For installations with one or more custom sizes</u>, see also installation specific wiring diagram included (where applicable)

RF filter, if used, is <u>not</u> provided by Sky Factory. One filter per power system required.

Revelation w/ EcoSlim electrical requirements (cont'd):

Sky Factory provided dimmer control (where specified):

- Lutron Diva DVSTV 0 10V dimmer/switch (UL & CSA compliant) Input: auto-ranging 120 - 277V AC
- Lutron Diva DVTV 0 10V dimmer/switch and PP-DV power pack (UL & CSA compliant) Input: auto-ranging 120 - 277V AC

Lutron Diva mounts in standard single-gang electrical box White standard, other colors available on request

Jung 240-10 dimmer/switch and external relay where specified (CE compliant) Input: 230 - 240V AC Installs in appliance box to DIN 49073

For dimming requirements, see page 6.

For dimmer wiring diagrams, see dimmer control (and relay where specified) and wiring diagrams included

For other dimmer controls provided, see installation specific wiring diagram included (where applicable)

Electrical work must be performed by a qualified electrician who is familiar with DC lighting systems and must conform to all local and national codes.

Non-Dimmable and Dimmable Certification:

ES22 Series, ES24 Series, ES26 Series, ES33 Series, ES34 Series, ES36 Series, ES44 Series, ES46 Series, ESCST Series, EP22 Series, EP24 Series, EP26 Series, EP33 Series, EP34 Series, EP36 Series, EP44 Series, EP46 Series, EP55 Series and EPCST Series fixtures when used with 24PS HLG Power System UL, CSA and CE Listed by Intertek Group plc

See also "EcoPlus and EcoSlim Drawings and Charts (24PS HLG)" and installation specific wiring diagram (where applicable)

	EcoSlim Lighting System - ES	24 Series to	ES46 Series	
TSF Model No.	Light Box Dimensions and Weight Only		System Wattage (Max)	Input Current @ 24 Volts DC
	WxLxH	Weight	-	
ES24	22.8125 x 46.8125 x 3.72 (inches)	17.6 lb	36.72	1.53A
ES26	22.8125 x 34.8125 x 3.72 (inches)	27.6 lb	57.1	2.38A
ES33	34.8125 x 34.8125 x 3.72 (inches)	20.8 lb	42.7	1.78A
ES34	34.8125 x 46.8125 x 3.72 (inches)	27.6 lb	52.6	2.19A
ES36	34.8125 x 70.8125 x 3.72 (inches)	40 lb	65.5	2.73A
ES44	46.8125 x 46.8125 x 3.72 (inches)	35.3 lb	59	2.46A
ES46	46.8125 x 70.8125 x 3.72 (inches)	47.5 lb	89.8	3.74A
ES24M	57 x 117 x 9.54 (cm)	7.8 kg	36.72	1.53A
ES26M	57 x 177 x 9.54 (cm)	12.6 kg	57.1	2.38A
ES33M	87 x 87 x 9.54 (cm)	9.5 kg	42.7	1.78A
ES34M	87 x 117 x 9.54 (cm)	12.6 kg	52.6	2.19A
ES36M	87 x 177 x 9.54 (cm)	18.1 kg	65.5	2.73A
ES44M	117 x 117 x 9.54 (cm)	16 kg	59	2.46A
ES46M	117 x 177 x 9.54 (cm)	21.1 kg	89.8	3.74A
ES24G	59.5 x 122 x 9.54 (cm)	8.3kg	36.72	1.53A
ES26G	59.5 x 184.5 x 9.54 (cm)	12.6 kg	57.1	2.38A
ES33G	90.8 x 90.8 x 9.54 (cm)	9.5 kg	42.7	1.78A
ES34G	90.8 x 122 x 9.54 (cm)	12.6 kg	52.6	2.19A
ES36G	90.8 x 184.5 x 9.54 (cm)	18.1 kg	65.5	2.73A
ES44G	122 x 122 x 9.54 (cm)	16 kg	59	2.46A
ES46G	122 x 184.5 x 9.54 (cm)	22.4 kg	89.8	3.74A

NOTE: For custom sizes, see also installation specific wiring diagram (where applicable)



Notice: The LED fixtures are 24V DC ONLY.

AC voltage connected directly to the fixtures will destroy the lighting system.

Step 1 continued

Fixtures are wired together in single or multiple circuits.

Each circuit is <u>dedicated to a single power system</u> and may be arranged in rows or clusters, depending on installation.

<u>A junction box with 1/2" trade size knock-outs</u> is attached on top corner of each fixture.

- Power leads inside fixture junction box are <u>polarized</u>, red (+) and black (-).
- Larger fixtures may have two sets of leads. When making connections, leads are wired together red (+) to red (+) and black (-) to black (-) unless otherwise specified.
- Where fixtures have multiple junction boxes, see installation specific wiring diagram included.
- Fixture wire size 18 AWG stranded.

Wiring from fixtures to V DC side of provided power system is <u>polarized</u>, <u>positive (+)</u> to <u>positive (+)</u> and <u>negative (-)</u>:

EcoSlim fixture red "+" to power system **Vo+**

EcoSlim fixture black "-" to power system **Vo**-

For power system V DC wire sizes, see "EcoPlus and EcoSlim Drawings and Charts (24PS HLG)"

HLG-480H-24B and HLG-600H-24B have two sets of ouput leads. Meanwell recommends loading no more than:

240 Watts on each set of cables for HLG-480H-24B

480 Watts on each set of cables for HLG-600H-24B

Wire and additional junction boxes from fixtures to power supply provided by others.

Wire gauge must conform to local and national codes. Voltage drop of no more than 3% is recommended. See Wire Sizing Chart in "EcoPlus and EcoSlim Drawings and Charts (24PS HLG)".

Step 2: Wiring the power system to source V AC

Run power to V AC side of the power system.

For power system V AC wire sizes, see "EcoPlus and EcoSlim Drawings and Charts (24PS HLG)"

Load to power system **ACL**

Neutral to power system **ACN**


Ground to power system 😔 (GREEN/YELLOW)

Wire gauge must conform to local and national codes.

Install the power switch on the V AC input side of the power system.

Step 3: Dimming requirements

Contact the Sky Factory if you plan on using a dimming system provided by others.



Wiring a Sky Factory provided dimmer control:

To wire the dimmer control (and external relay where specified), refer to wiring diagram included with dimmer and relay and "EcoPlus and EcoSlim Drawings and Charts (24PS HLG)", and installation specific wiring diagram included (where applicable.)

Step 4: Checking the polarity

